

# Troubleshooting 10.5 half

Phenomena	Reason
The machine dose not work	Power is failure or not Plug is in or not Pulsator is twisted or not
The draining does not work	Drain hose is put down or not Drain hose freezes or not Drain hose is blocked or not There is clothes outside of spinning tub or not
Abnormal noise during washing	There are hairpins, coins, or metal items in washing tub or not
Abnormal noise and violent vibration during spinning	Machine is level or not Press in the safety cover smoothly or not Clothes is in the outside of the spinning tub or not. Clothes is too much in the spin tub or not
Some water flows from the drain hose in the first use	It is the water remained in the factory inspection of performance.