

Troubleshooting ALL VIIGA

Phenomena	Possible Causes
The machine does not work.	<ul style="list-style-type: none">* Is the power cut?* Is the power supply cord connected to a power outlet?* Is the pulsator tangle with something?
Unable to drain.	<ul style="list-style-type: none">* Has the drain hose being lowered?* Is the drain hose frozen?* Is the drain hose blocked?* Are there any clothes fallen outside of the spin tub?
Abnormal sound while washing.	<ul style="list-style-type: none">* Are there any loose articles in the wash tub?
Water in the wash tub reduced.	<ul style="list-style-type: none">* Is the bellows of the overflow filter being miss-installed?
There is abnormal sound and violent vibration while spinning.	<ul style="list-style-type: none">* Is the machine place on a flat and solid ground?* Is the spinner cap being placed into the spin tub?* Are there any clothes fallen outside of the spin tub?* Are there too many laundry in the spin tub?